



USER MANUAL

2.4G Wireless VisionBoard



To use this device properly, please read this manual before installation.

Installing Batteries in the Keyboard

1. Remove the two phillips-head retaining screws and set aside.
2. Remove the battery compartment cover by sliding it in the direction indicated by the arrow.
3. Insert two new AAA sized batteries. Correct battery placement is indicated in the battery compartment.
4. After the batteries are installed, carefully replace the battery cover and secure in place with the two screws.



Connecting the nano receiver to your computer:


The nano receiver is located in a recess on the bottom of your wireless keyboard.

There is no need to turn off or restart your computer. Simply remove the nano receiver from the bottom of your keyboard and plug it into an available USB port.



IMPORTANT:

Do not lose the nano receiver; your keyboard will not operate without the nano receiver!

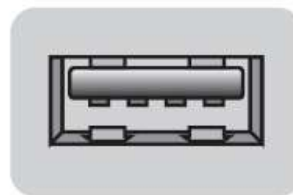

USB Port


Usage

Wait a few moments after installing the nano receiver while the computer recognizes your new wireless keyboard and mouse.

Your wireless keyboard and mouse may now be used. Optimal operating distance is up to 30 feet (10 meters). Operating distance can be affected by the work environment and obstacles between the keyboard, mouse and the nano receiver.

Low Battery Alert

When the indicator light next to the space bar begins to flash, it is time to replace the keyboard's batteries.

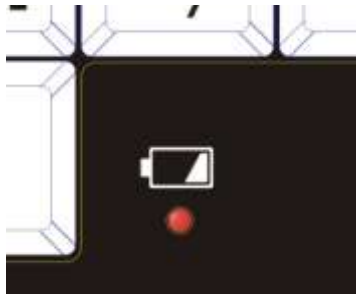

Adjusting the angle of your keyboard:

There are two feet on the bottom of the keyboard that can be flipped up or down to give you the most comfortable position for keyboard use.



System Requirements:

PC running Windows 2000/XP/VISTA/7

Will operate on an Apple computer running OS 10 or newer

Available USB port

Additional information:

1. Operational distance can be affected by the work environment.
2. Typical usage will provide you with 60 – 90 days of battery life. The batteries will have a longer or shorter life depending on your mouse and keyboard use.
3. If the keyboard or mouse stops functioning, replace the batteries.
4. Dispose of batteries properly.
5. There is a reset button on the bottom of the keyboard case. When pressed, the computer will re-discover the keyboard. This will result in the keyboard becoming non-functional for a few seconds while the process is being completed.



This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference and (2) This device must accept any interference received including interference that may cause undesired operation.

Chester Creek Technologies, Inc.
Arrowhead Place
Suite 130
205 West 2nd Street
Duluth, MN 55802
218-722-1837
www.chestercreek.com